

Q.

How to activate EasyAccess 2.0 in the system settings of TK and iP Series HMI?

To address the increasing demand for remote monitoring and control features, EasyAccess 2.0 provides a remote connection solution. To use EasyAccess 2.0, please activate your HMI for connection. This FAQ explains how to activate EasyAccess 2.0 in the system settings of TK and iP series HMI.

A.

Step 1. Update OS version to 20201007 or later.

Step 2. Connect HMI to the internet. Ethernet HMI models can connect to the internet via Ethernet, and for non-Ethernet HMI models that are equipped with USB Host ports, 3G/4G USB Dongle support will be provided so that they can connect to the internet to make use of EasyAccess 2.0.



Step 3. Open the EasyAccess 2.0 tab in System Settings and click [Setup].



Step 4. Select a region and click [Next].



Step 5. Scan QR code.



Step 6. In the website accessed after scanning the QR code, enter the credentials for logging in Domain Admin and the Activation Code for activating HMI. Please contact your dealer for an EasyAccess 2.0

activation card.

3:48

Close account.ihmi.net AA

EasyAccess2.0

HMI is not activated

Domain

admin

Password

* Activation Code

Activate

[Click to learn more about EasyAccess 2.0](#)

Step 7. Return to System Settings and click [Start]. HMI can successfully connect to EasyAccess 2.0.

