

Beckhoff ADS/AMS (Ethernet)

Supported Series: Twincat

HMI Settings:

Parameters	Recommended	Options	Notes
PLC type	Beckhoff ADS/AM	IS (Ethernet)	
PLC I/F	Ethernet		
Port no.	48898		
ADS port	801	801, 811, 821, 831	
PLC sta. no.	1		

PLC Settings:

TwinCAT System Manager, being connected to the PLC you have to click on **[Route Settings]** and in the **[Static Routes]** subwindow press **[Add]**.

1 1 7	Sin titulu - Paret					-			0 0 0
Elen Inco	Ver								6
Pegar Contra Pegar	Selectorar 	7 10 A 9 7 9		• <u>sti</u> tetana •		Catter 2	Citerre	Lotur	
CK WENTER	OK - TwinCAT System Manager - V	CX-762F84							04
and the second second second second	Acciones Ver Opciones Ay								
0000	(命)()()()()()()()()()()()()()()()()()()	8 3 m / # A	魚信 医 部 4 日	* 4 (7)	200	8 8			
E Configurat		Current Routes	Ratic Routes Pagent Re	utes Netid Metap	met				
PLC - Configurate	iettings Keprest Igunación Jóhn E/S tivos de E/S	Rode Hill 1016-Adb	Ans/Net/d 169-254 170 16 . 152 168 1.38 1.1	Descole 382,254 170 163 383,254 170 161	Tps 107/IP 109/IP	Consertants + Frequentization		<u>#</u> 2	
	12	1 <u>2</u> 1360 = 768pineles	🗟 Tamako: 37,963						100% @

A new window will appear, in which you have to enter the following data:

Route Name: HMI o TP, or the name you want, it has no greater importance. AMSNetID: La IP del HMI followed by (.1.1), as an example (169.254.170.163.1.1) Transport Type: TCP/IP



Adress Info: The IP of the HMI, following the example (169.254.170.163)

Check Box: IP address


Pulsate [Add Route]

Configuration SYSTEM Configuration Tempo real - Canfiguration Terma dicionales Terma dicionales Totom Objects PLC - Configuration Configuration Configuration I/S	Current Routes Static Poutes Project Routes Trettd Management						
	Route AnniField Devición Tipo Convertano HMI 100.254 170 156 100.254 170 153 100.433 100.497 TONI-AB 192.168 1.35 1.1 169.254 170.161 100.978						
ispositivos de L/S signaciones	Add Route Dialog						
	Evide Huat Name / IP. Refeats Status Broadcast Search Heat Name Connected Address AMS Natid Twe/CA7 DS Vesion Connectants						
	Made						
	Rede Name (Target) Hell Price Press) OLTETEL Andhelid 19325417016311 Target Roude Roude						
	Transport Type TQPAP Address Infe Host Name Direction IP						
	Convection Tensor Ltd 5 Add Route Denne						

Configure in the EasyBuilder Pro the communication with the PLC with the IP and the AMS NetID of the PLC and having imported the Tags, in this case the PLC has the IP (169.254.170.162)

and its AMS NetID (5:100:113:130:1:1)

Fichers El Cl. 4: 4: 4: 5: 10cm Decent Properties of data series Decent Decent Decent Properties of data series Decent Decent Decent Properties of data series Decent Decent Decent Decent Properties of data series Decent Decent Decent Properties of data series Decent	
del Satema S	
Abbrids environment * X 4 18 - WINDOW, Edd B Department	* X
1 Maxwee Made Image: Comparison Description Descriptingendescripting Description Description Descript	
- 2 Devices	time
Arbol de ventarias Vinte preva et vinte 1	teca de
Ample Genetic Ande Constr. Ande Con NUM SCIL 50 %-	·* - 88

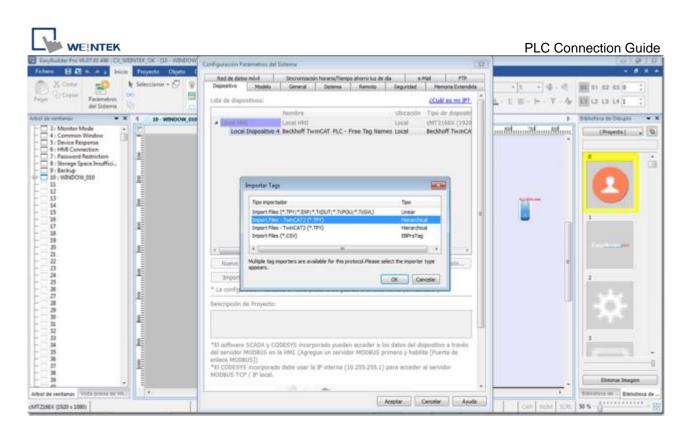

Once you verify that everything works OK, in the soft **[TwinCAT System Manager]**, activate the configuration in the PLC by pressing the rubik's cube button or in **[Actions]** > **[Save in record ...]**, if this step is not done, the CONFIGURATION of the PLC is lost, since the parameter of the direction that we have given of the HMI, you have not saved it in persistent memory.

CX_WEINTEX_OK - TwinCAT System Manager - 'CX-762164'								
Archivo Edición Acciones Ver Opciones Ayuda								
🗅 📽 📽 🖬 🚳 🗛 🙏 🖉 📾 📾 🛤 👌 😹	nn 🗸 💰 🏨 🔮	\$ 1 × @ \$	N Q 🖓 🚱	•. 🔊 🐗	F (1) 📍			
Configuración SYSTEM		configuración siect R						
- 🙊 Tiempo real - Configuración	Current Accounts	configuration ged R	loutes Netid Hanag	enert				
- 📑 Tareas adicionales	Route	AmeNietid	Dirección	Tipe	Comentario			
- Ja Route Settings	HM	169.254.170.16		TCP/IP	00000			
COM Objects	TONI-AIB		169.254.170.161					
PLC - Configuración								
Configuración E/S Dispositivos de E/S								
Asignaciones								
- Angracones								
	*							
	Madr	Borrar			Properties			
	L							
Activa la configuración							CX-762F84 (5.100.113.130)	Tiempo real 10%

Device address:

Bit/Wor	Device type	Format	Range	Memo
В	IX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
В	QX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
В	MX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
W	IW	DDDDD	0 ~ 65535	
W	QW	DDDDD	0 ~ 65535	
W	MW	DDDDD	0 ~ 65535	
DW	ID	DDDDD	0 ~ 65535	
DW	QD	DDDDD	0 ~ 65535	
DW	MD	DDDDD	0 ~ 65535	

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit

Wiring Diagram:

Ethernet cable:

