

DELTA AH500

Supported Series: DELTA AH500

Website: <http://www.deltadriver.com>

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DELTA		
PLC I/F	RS232		
Baud rate	9600		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device Type	Format	Range	Memo
B	X	DDDdd	0 ~ 51115	
B	Y	DDDdd	0 ~ 51115	
B	S	DDDD	0 ~ 2047	
B	M	DDDD	0 ~ 8191	
B	SM	DDDD	0 ~ 2047	
B	T	DDDD	0 ~ 2047	
B	C	DDDD	0 ~ 2047	
B	HC	DD	0 ~ 63	
W	XW	DDD	0 ~ 511	
W	YW	DDD	0 ~ 511	
W	SW	DDDD	0 ~ 2047	
W	D	DDDDD	0 ~ 32767	
W	TV	DDDD	0 ~ 2047	
W	CV	DDDD	0 ~ 2047	
W	HCV	DD	0 ~ 63	
W	E	DD	0 ~ 31	

Wiring Diagram:

Diagram 1

RS-232

The serial port pin assignments may vary between HMI models, please click the following link for more information.

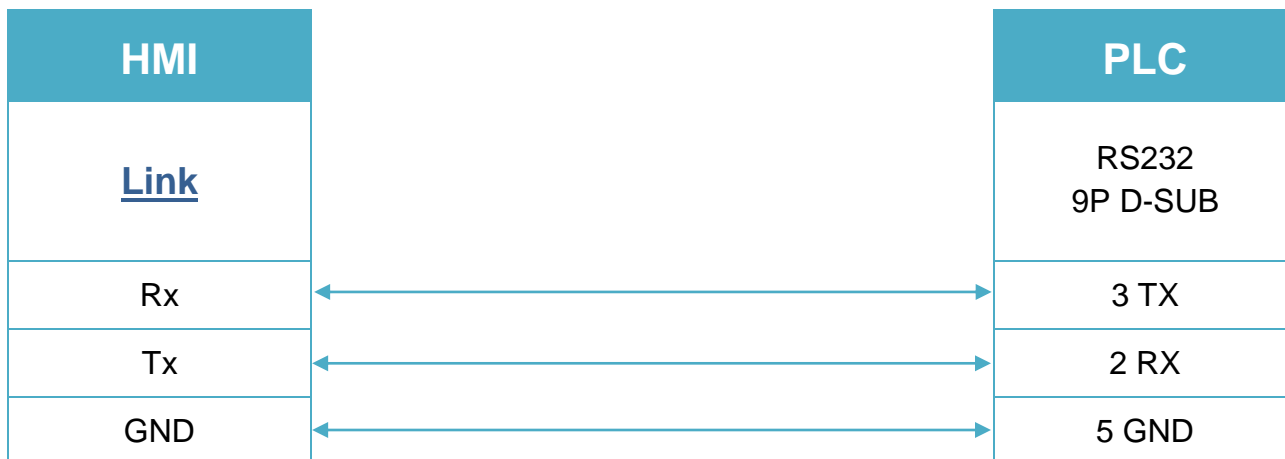


Diagram 2

RS-485 2W

The serial port pin assignments may vary between HMI models, please click the following link for more information.

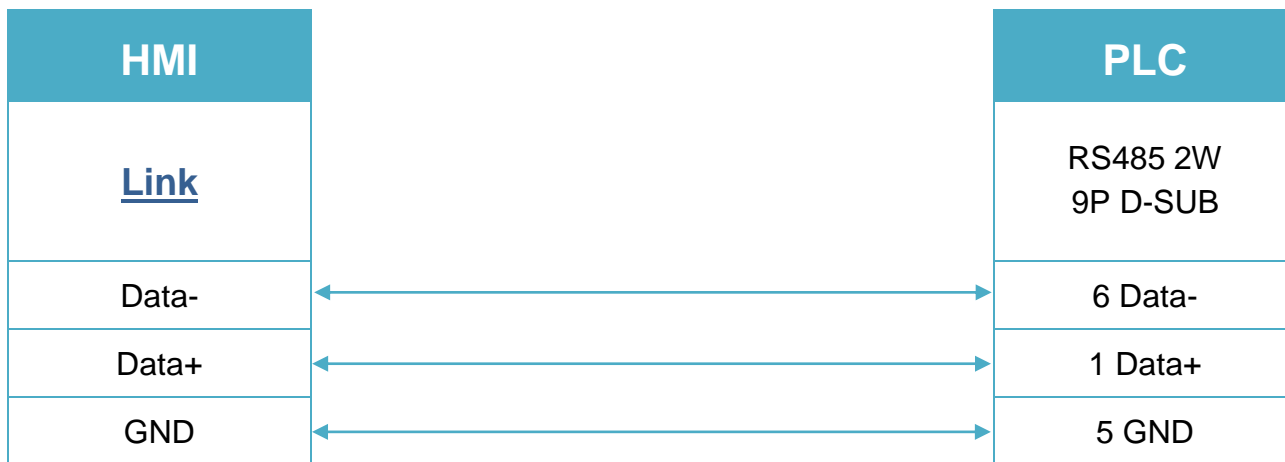


Diagram 3

RS-485 4W

The serial port pin assignments may vary between HMI models, please click the following [link](#) for more information.

