

OPTO22 CONT Protocol (Ethernet)

Supported Series: OPTO22 SNAP PAC System

Website: <http://www.opto22.com/>


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OPTO22 CONT Protocol (Ethernet)		
PLC I/F	Ethernet		
Port no.	22001		


On-line simulator	Yes	Multi-HMI connect	Yes
-------------------	-----	-------------------	-----

Import Tags:


1. Open Browser Configurator, double click on **[Source for Items to Add to the Browser Database]**, and then select the PLC project containing the tags for export.

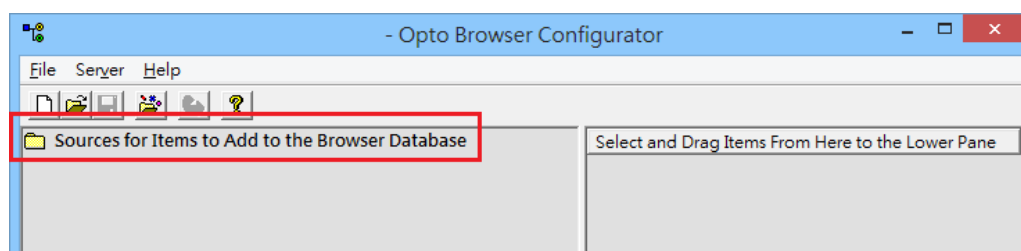


2. Select a controller and then click **[OK]**.

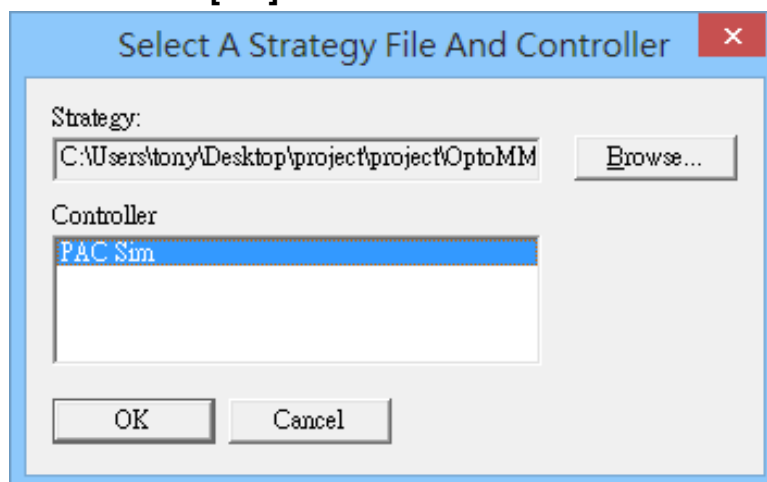


3. Drag the items from the right pane to the lower pane.

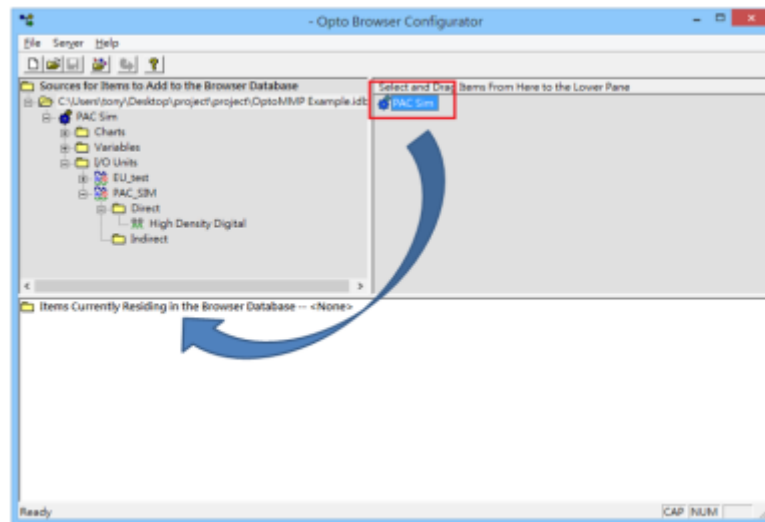


4. Name the tag file and then click [File] » [Save].

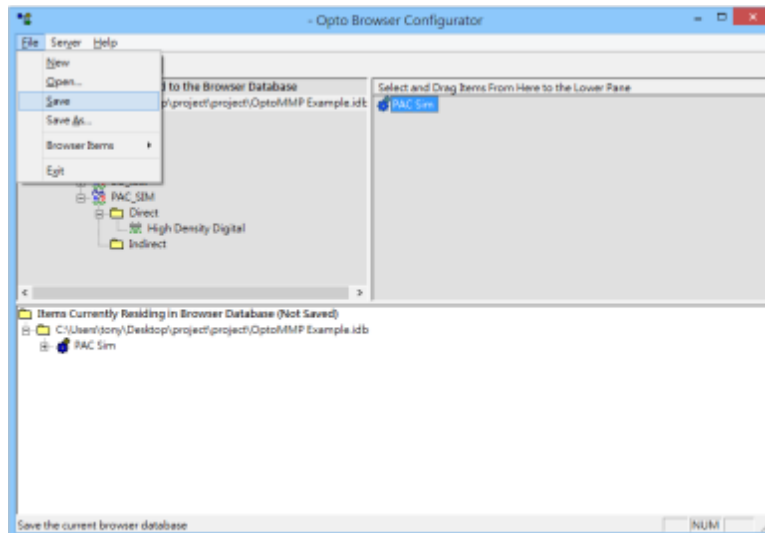

5. Launch EasyBuilder Pro, add “**OPTO22 CONT Protocol (Ethernet)**” driver into the device list, set the communication parameters, and then click [Import Tags].

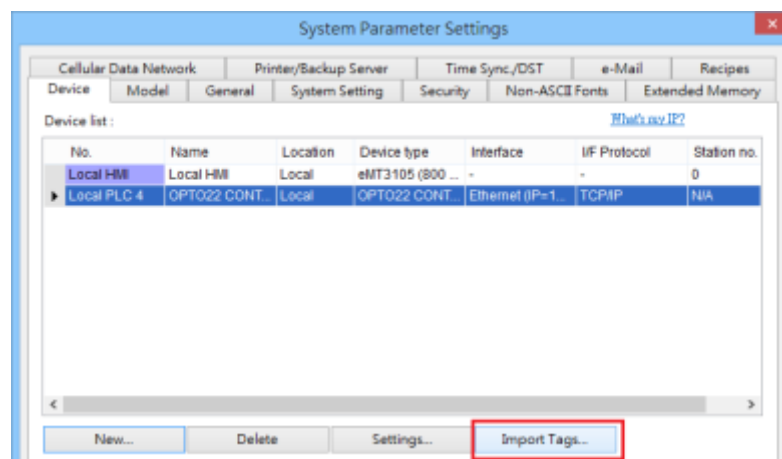

6.Tag Manager opens after selecting a tag file. Click **[Select all]** to select all tags or select certain tags by clicking their checkboxes. Click **[OK]** to import the selected tags. “**Import tag information successfully.**” message shows when the tags are imported successfully.

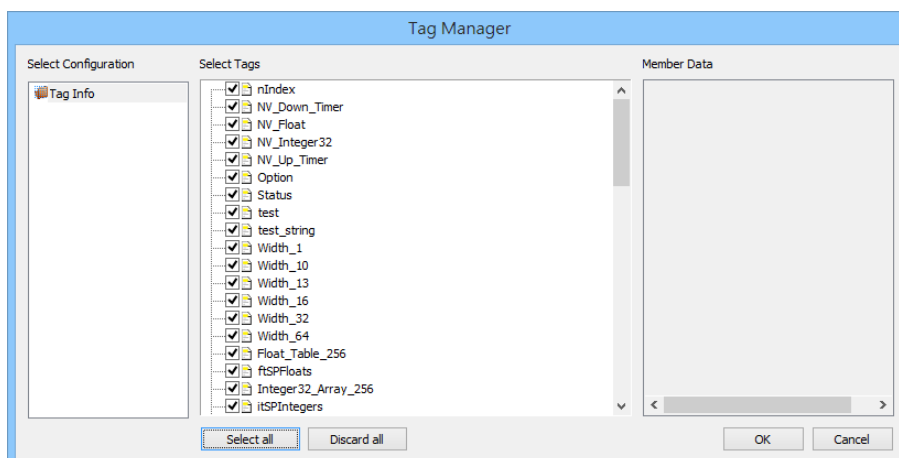

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
LInt	64-bit Signed	64-bit
String	ASCII input and ASCII display	Length=word

Note: EBPro V6.03.02 or later supports 64 bits data type (**cMT Series only**), but please note that the address limit range is 48 bits in maximum..

Wiring Diagram:

Ethernet cable:

