

# Mitsubishi A3A/A3N/A1SH/A2SH

Supported Series: Mitsubishi A3A,A3N,A1SH,A2SH


Website: <http://www.mitsubishi-automation.com/>

## HMI Setting:

Parameters	Recommended	Options	Notes
<b>PLC type</b>	Mitsubishi A3A/A3N/A1SH/A2SH		
<b>PLC I/F</b>	RS232		
<b>Baud rate</b>	9600		
<b>Data bits</b>	8		
<b>Parity</b>	Odd		
<b>Stop bits</b>	1		
<b>PLC sta. no.</b>	0		
<b>File register</b>	0	0 ~ 8	*Note

<b>Online simulator</b>	NO
-------------------------	----

\*Note: Parameter -> Memory capacity -> File register

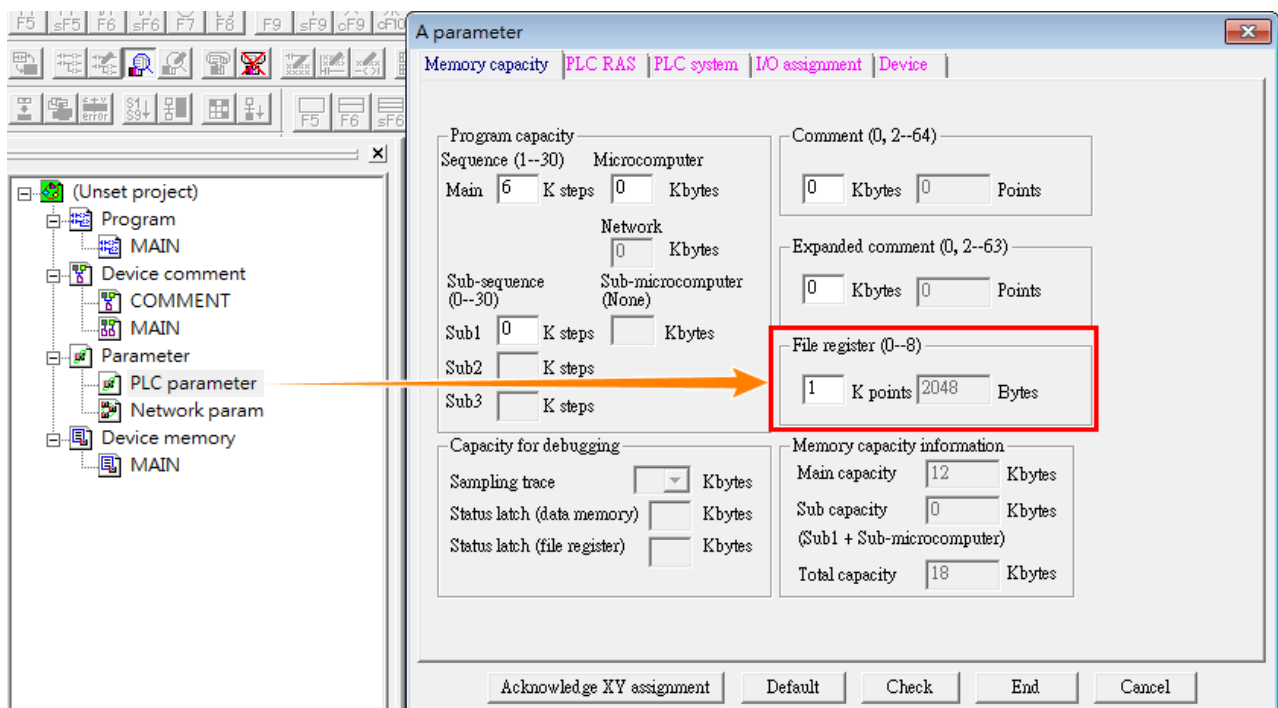

The screenshot shows the 'A parameter' dialog box with the following settings:

- Program capacity:** Sequence (1--30) Microcomputer, Main: 6 K steps, 0 Kbytes
- Network:** 0 Kbytes
- Sub-sequence (0--30) Sub-microcomputer (None):** Sub1: 0 K steps, 0 Kbytes; Sub2: 0 K steps; Sub3: 0 K steps
- File register (0--8):** 1 K points, 2048 Bytes (highlighted with a red box and an orange arrow)
- Memory capacity information:** Main capacity: 12 Kbytes; Sub capacity: 0 Kbytes; Total capacity: 18 Kbytes


## Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Relay
B	Y	HHHH	0 ~ ffff	Output Relay
B	M	DDDDD	0 ~ 65535	Auxiliary Relay
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Memory
W	CV	DDDDD	0 ~ 65535	Counter Memory
W	D	DDDDD	0 ~ 65535	Data Register
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

## Wiring Diagram:

Use the RS422 to RS232 PLC programming cable (shown as follows)

MITSUBISHI AnS CPU

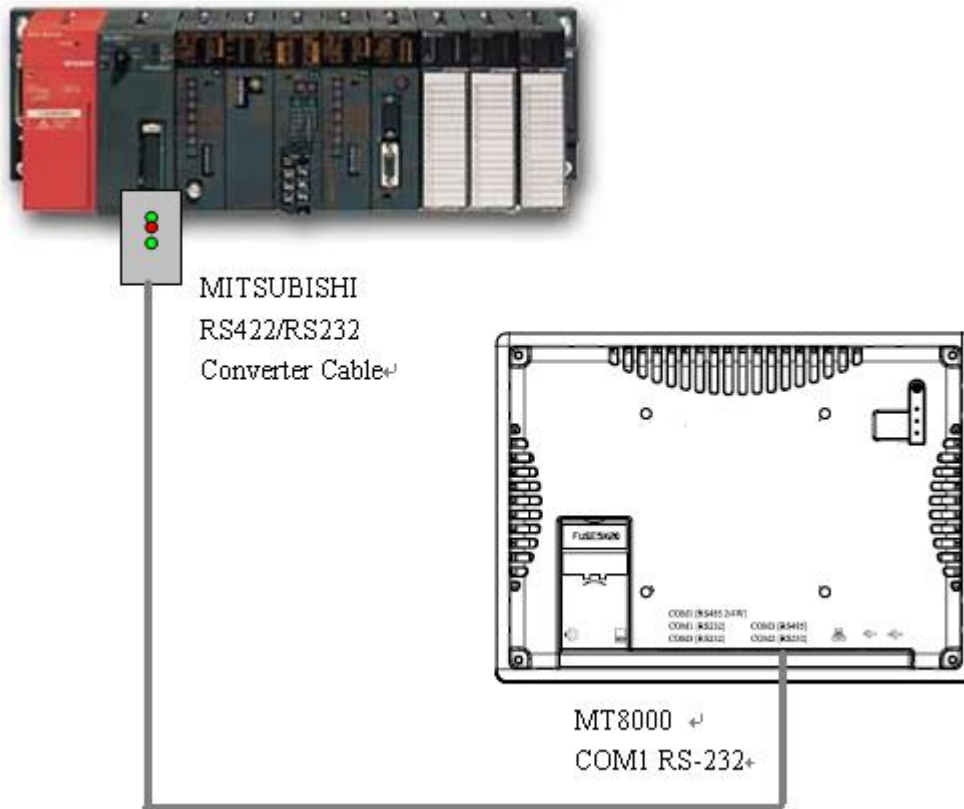

**Note:** Due to hardware limitations, this PLC is not supported by HMI models without RTS/CTS.

## Diagram 1

### RS-232

The serial port pin assignments may vary between HMI models, please click the following link for more information.

HMI	PLC Programming Converter		PLC
<a href="#">Link</a>			RS422 25P D-Sub Male
Rx	TX	TX+	2 RX+
Tx	RX	RX+	3 TX+
GND	GND	DTR+	4 DSR+
RTS	CTS	GND	7 GND
CTS	RTS	TX-	15 RX-
		RX-	16 TX-
		DTR-	17 DSR-

## Diagram 2

cMT-G01, cMT-G02, cMT-SVR-100/200, cMT-FHDX-820, cMT-SVRX-820 connection diagram

HMI		PLC
<a href="#">Link</a> RS485-4W		A Series PLC CPU 25 pin
8 TX+	←→	2 RX+
9 TX-	←→	15 RX-
6 RX+	←→	3 TX+
7 RX-	←→	16 TX-
1 Data+	←→	4 CTS+
4 Data-		17 CTS-
5 GND		7GND
		20 21 Short